


SOAP Wizard



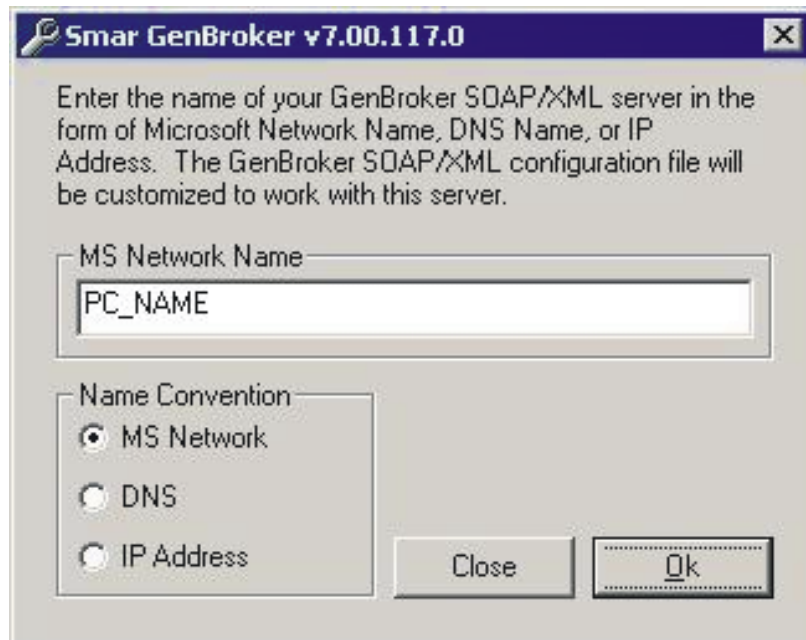

Specifications and information are subject to change without notice.
Up-to-date address information is available on our website.

web: www.smar.com/contactus.asp

Index

SOAP WIZARD.....	1
Setting Up Your GenBroker Server PC	1
Optimization.....	3

SOAP Wizard

Setting Up Your GenBroker Server PC

You must do the following to use SOAP/XML communications on the GenBroker server PC:

1. The server must have ProcessView Version 7.0 or higher installed.
2. The server must have Microsoft Internet Information Server (IIS) 5.0 or higher installed.
3. From **Start > Programs > Smar > ProcessView > Tools**, select the **SOAP Wizard**. This launches the **SOAP/XML Wizard**, shown in the figure below. This wizard will assist you in setting up your GenBroker SOAP/XML server. Enter the name of the PC that will be the SOAP server (should be the PC you are running the wizard on).

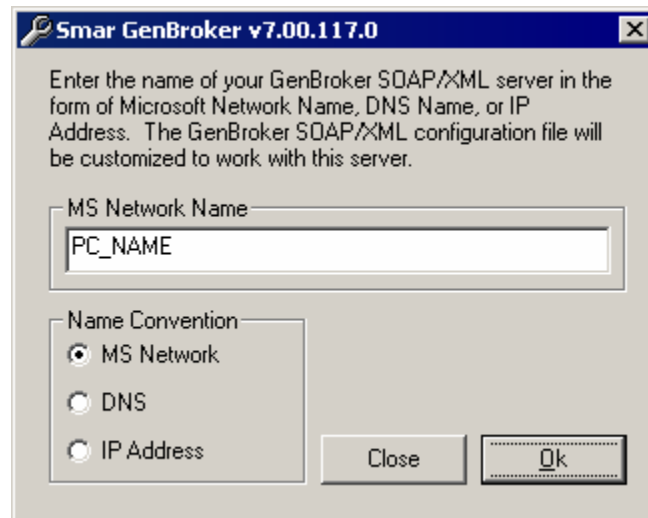


Figure 1. SOAP/XML Wizard

4. Add "Network" to the default launch and access permissions in DCOM:
 - Select **Start > Run** and type "DCOMCNFG" into the **Run** field. Press **Enter**.
 - Go to the **Default Security** tab in the **DCOM Configuration Properties** window, as shown in the figure below.

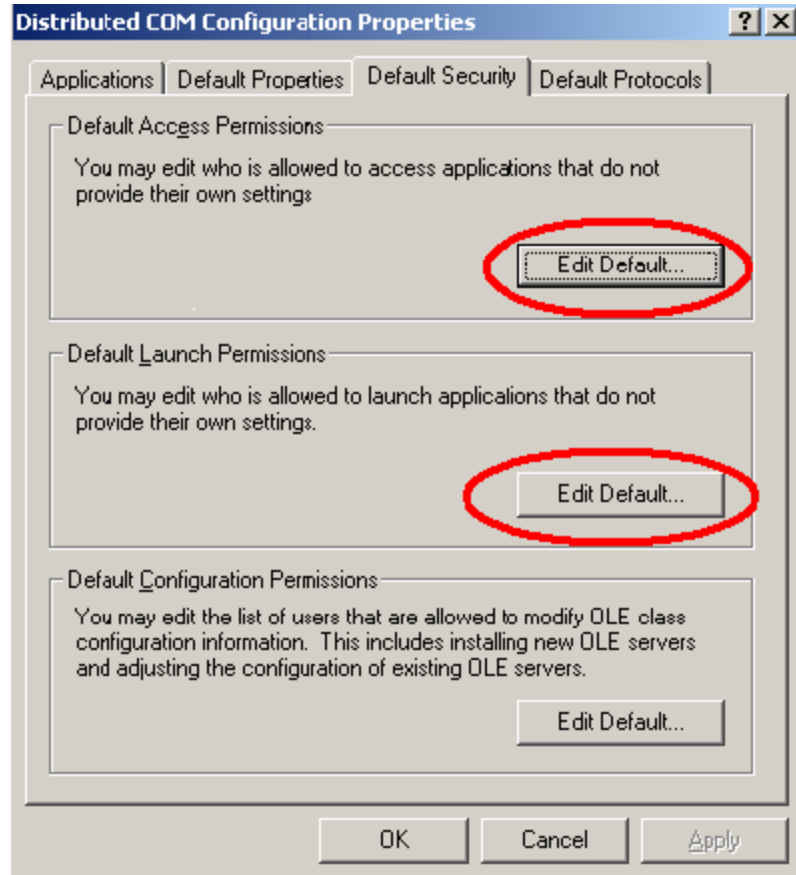


Figure 2. DCOM Configuration Properties

- Under **Default Access Permissions** click on the **Edit Default** button. This opens the Registry Value Permissions dialog box. In this dialog, you should make sure that **Network** is there. Otherwise click on **Add...** and select it from the list of local users and groups.
- Follow the same procedure as described above for the **Default Launch Permissions**.

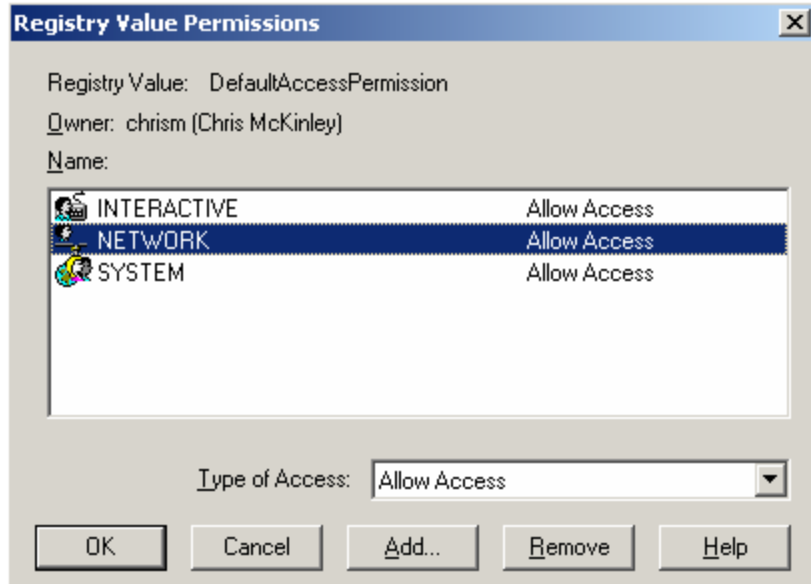


Figure 3. Registry Value Permissions

5. Do not set GenBroker as a service or start it manually; SOAP will take care of starting it if a call is made.
6. Reboot the PC. Now other PCs will be able to use your PC as a GenBroker server over SOAP.

Optimization

Disable the TCP/IP server in the **GenBroker Server** tab of the GenBroker Configurator, as shown in the figure below. The TCP/IP Initialization code slows down the GenBroker.exe module initialization, causing a delay the first time it is started.

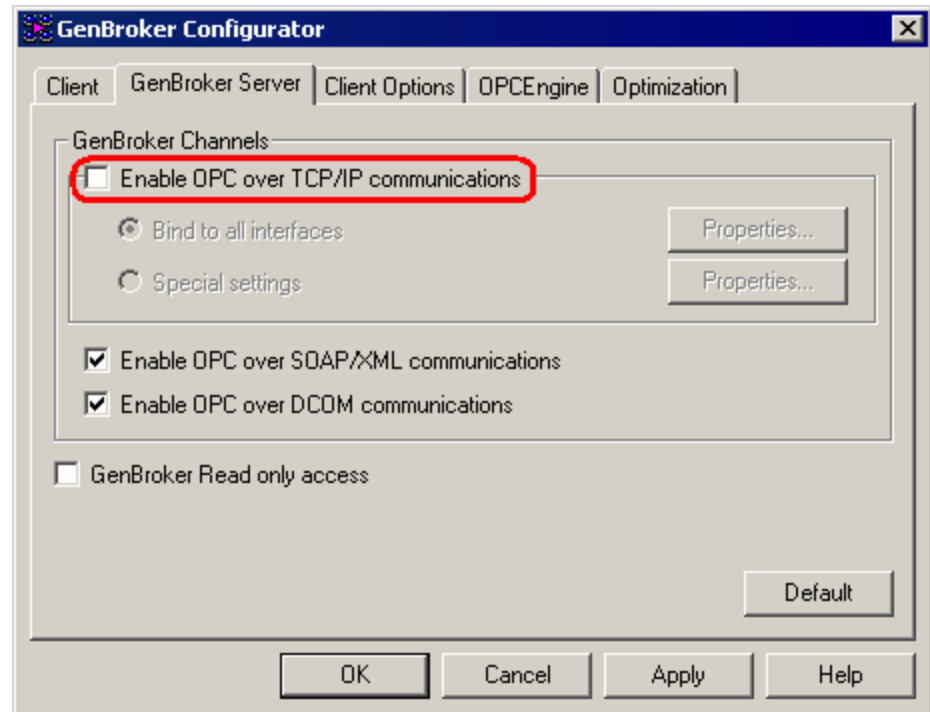


Figure 4. Disabling TCP/IP Communications

